


## 20ft Fabric Wall Flex Straight Setup Instruction Sheet

### Setting up the frame

- 1) Unpack the frame and make sure you have all the parts.
- 2) Put the frame together according to the diagram below.
- 3) Unscrew the screws from the bottom corners where it will be used to secure the base plate.

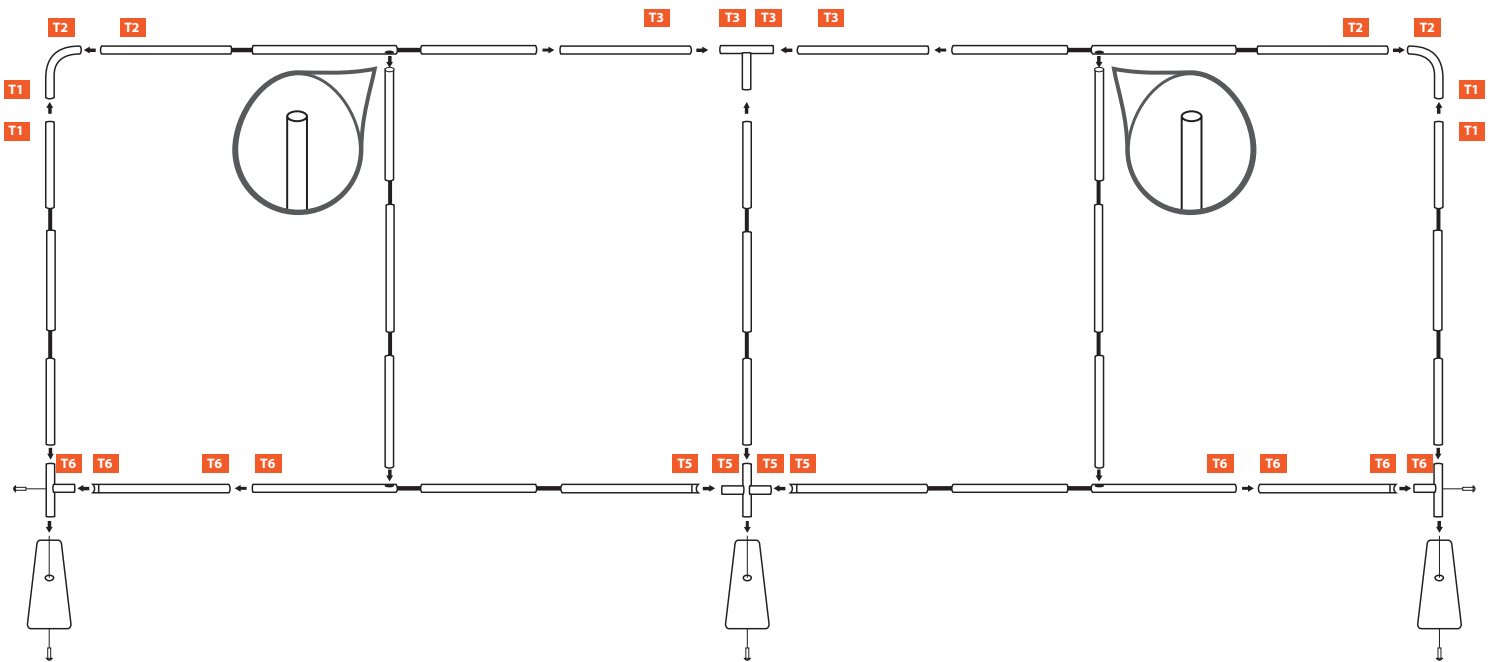

### Assembling the Fabric and Base Plate

- 1) Unzip the fabric and slide the fabric over the frame.  
*Note: There should be two holes in the bottom corners for the screws to secure the base plate.*
- 2) Pull up the fabric so it covers the whole frame. Zip up the fabric to secure.
- 3) Insert the screw (previously removed) through the hole on the base plate & the fabric, and then secure it.

**To Disassemble:** Reverse Setup Instructions.



**How to wash:** The fabric print can be placed into the washing machine with a small amount of detergent and then dried in the dryer using gentle tumble and low heat settings.